

## Hybrid SUPD Satellite Service Check List

Location	Description	Action	6 months	12 Months	18 Months	24 Months
1	Air non return valve	Check operation	X		X	
		Replace complete NRV		X		X
2	Water Non return valve	Disassemble, inspect/ replace O-ring	X		X	
		Replace complete NRV		X		X
3	Air regulator	Adjust pressure to ensure manometer operates and adjust to correct pressure.	X	X	X	X
4	Air non return valve	Disassemble and Inspect/ Replace O-ring	X		X	
		Replace complete NRV		X		X
5	Injectors	Clean, Inspect/ Replace O-rings	X		X	
		Replace		X		X
6	Quick Coupling O-rings	Replace		X		X
7	Air valve	Inspect operation/ clean and lubricate piston	X		X	
		Replace if required		X		X
8	Selector switch Axel	Inspect O-rings/ Replace O-rings	X	X	X	X

