



Assigning address after replacement of display, control board or frequency inverter

1. Power off all pumps except pump nr 1, typically the pump next to the display.
2. Wait for power to be completely off pumps (3 min.)
3. In display go to setup-> Multiboosters -> configure network->confirm configure network.
4. The display will now for a short while be looking like this:

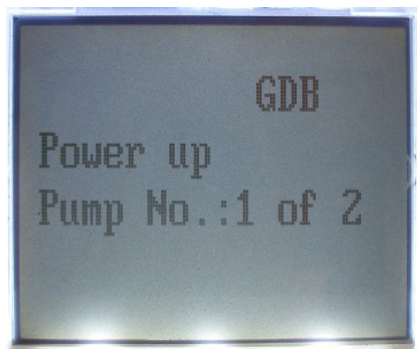

5. After a short while the display will change to "Power up Pump No.: 2 of 2" (if it is a BF16 - otherwise it will change to "Power up Pump No.: 2 of x" where x is the total no of pumps).
6. For a BF16 the display will now look like this:

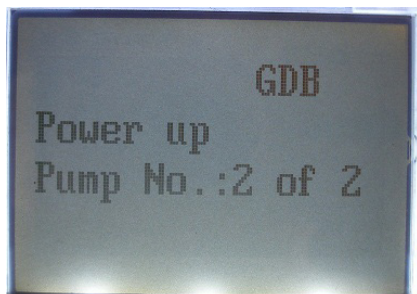

7. Turn on power to pump no 2.
8. When this is done for all pumps one after the other, the display will restart and the booster is ready to run.