


## Recharge battery in display module - Loss of software configuration

If both the green ON-LED and the red OFF-LED are lighting up, when turning on the display, it is most likely due to low power of the internal battery. To reset the display follow this instruction.


For Mainstation, Boosters, Multiboosters, Airspexx and Doorway Sanitation System:

1. Turn off the unit.
2. Press and hold down the button closest to the display.

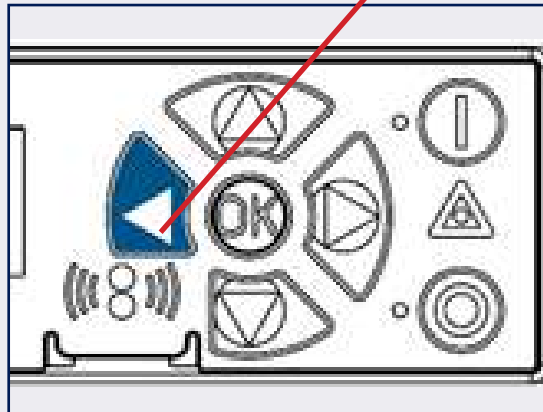

For Typhoon Dual:

3. Turn on the unit while still holding down this button.
4. Now the display starts up in standard mode.
5. Leave power on the unit for a while to let the battery charge.

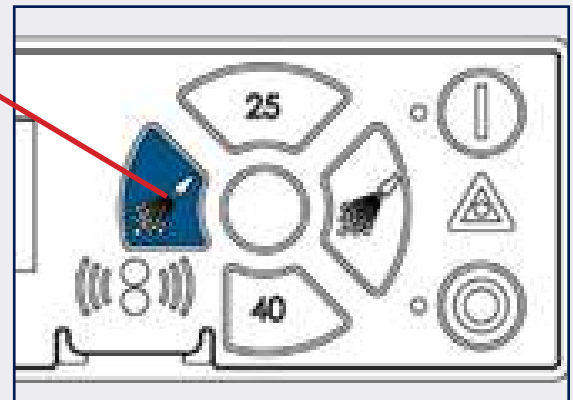

For Standard Typhoon press the same button even though there is no picture on the button.

3. Turn on the unit while still holding down this button.
4. Now the display starts up in standard mode.
5. Leave power on the unit for a while to let the battery charge.

### Loss of Software configuration

If the battery back up is flat - we have introduced a new boot software which ensures the unit to start up in "normal" mode and not "boot" mode. This software upgrade has already been implemented.

For further  
information:

Dir. tel: +45 2969 5100  
info@nilfiskfood.com

**Nilfisk FOOD**

Blytaekervej 2, DK-9000 Aalborg  
www.nilfiskfood.com  
www.nilfiskfood.com/woc  
info@nilfiskfood.com