


Airspexx Dispensing System

**Models: DS1-RMT
DS1-SST
DS2
DS2-HH**

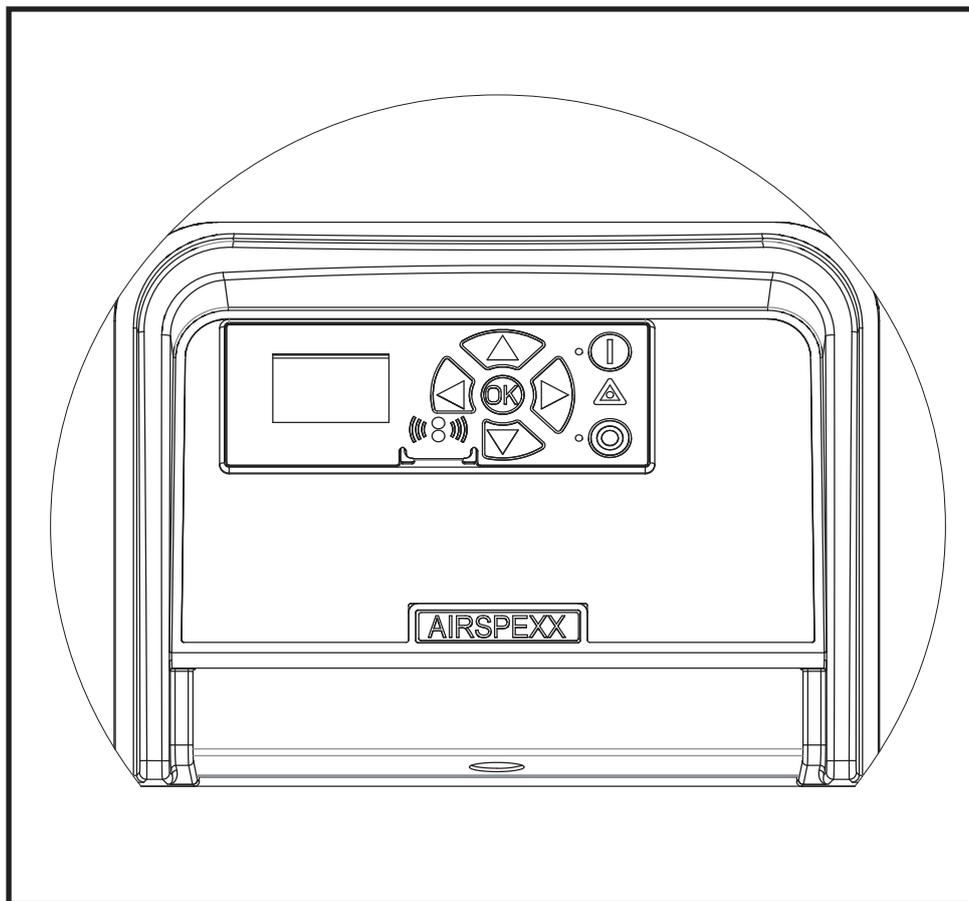

EN

Software Manual 1-19


Contents:

1. Description	6
2. Display layout.	6
3. Modes	6
3.1 Power On	6
3.2 Standby/Run	5
3.3 Power Off	6
3.4 Error/Warning	6
4. Overview of Main- and Sub-menus	7
4.1 Content of the Main menu	8
4.2 Content of the Programs menu	9
4.3 Content of the Timer menu	10
4.4 Content of the Release menu.....	11
4.5 Content of the Delayed start menu	11
4.6 Content of the Settings menu	12
4.7 Content of the Errors menu	13
4.7.1 Example of Error log screen display.....	13
4.7.2 Error List	13
4.8 Content of the Info menu	14
4.9 Content of the Communication menu	14
5. Upgrade Firmware	15
5.1 Upgrade using USB Cable	15
5.2 Upgrade using IrDA Cable	17
5.3 Upgrade Controller Board	19

1. Description

This Chapter describes the operation of the control panel of the Airspexx Unit

1. OFF
Button (1) switches OFF the unit.
2. ON/STANDBY
Button (2) switches ON the unit.
3. ERROR
Error light indicator (3).
4. NAVIGATION BUTTONS
The four "arrow" navigation buttons (4) are used for navigation in the display menu. Pressing the "OK" button activates the menu and confirms any activity displayed.
5. DISPLAY

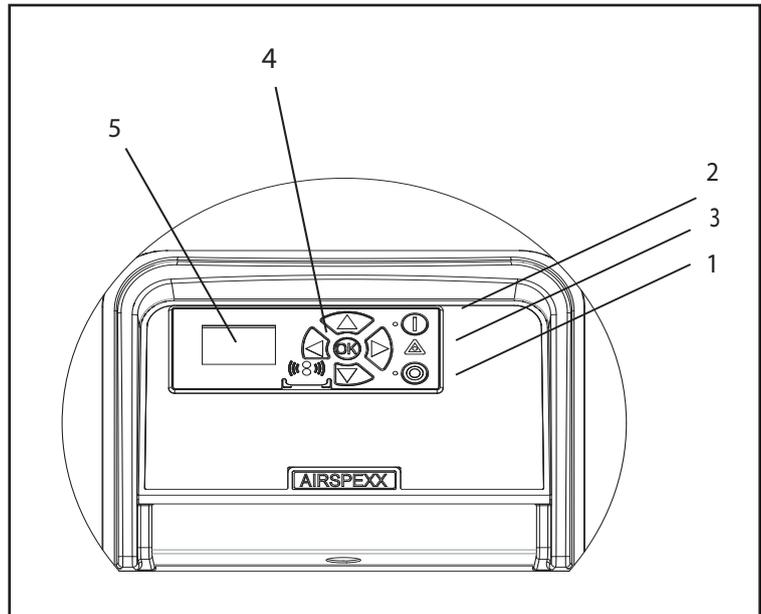

110002999

2. Display layout



(1)

When switched on the display will show an arrow symbol in the top right corner equivalent to the active navigation buttons on the control board.

The arrows illustrate that it is possible to scroll up and down between the menus. Scrolling to the right makes it possible to enter a value. Set the value scrolling up (+) or down (-) to set the value higher or lower accordingly. Confirm by pressing ok.


(2)

A letter combination for easy reference in connection with service work will appear in the top right corner of the display.


3. Modes

3.1 Power On

The very first time the unit is switched on, we recommend setting date and time in the settings menu, Time (FA), Date (FB). If date and time is not set, date and time will count from the pre-set default date and time.

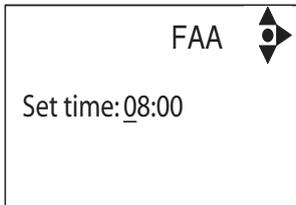


Set time, confirm by pressing "OK".

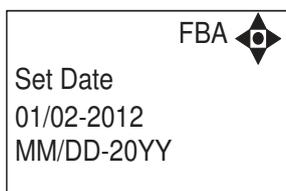

Set date, confirm by pressing OK button.

3.2 Standby/Run

The start up display will look as the below.

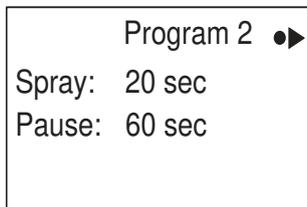

Green ON indicator light up. By default the green indicator will flash for 10 seconds before going "on". This can be changed in menu "delayed start".

In RUN mode green on indicator will be constant on, and the spray-time will start to count down to 0, the AIRSPEXX unit will in this period be active. (Program 1 will not start to count down, in this setting the AIRSPEXX unit is continuously on).

3.3 Power Off




When the unit is off the display will only show a small dot in the top right corner.

In Off mode it is possible to access all menus without activating the unit by pressing the OK button on the panel.

Dot is equivalent to the OK confirm button on the panel.

3.4 Error/Warning

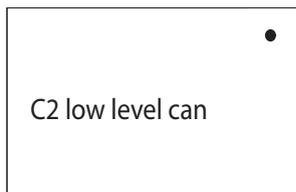

In case of an error/event, a description of the error will appear on the display screen, and the red error indicator will flash.

Press OK to remove the error text from the display, and return to the menu/startscreen. the ERROR indicator will still flash, OFF button will stop the error indicator flash

If an error occurs, the relay of terminal block "OUT1" will be activated (see electrical drawing in "Directions for Use").

To see further error/warnings, a list of errors/warnings and possible cause and remedy go to section 4.7.2.

4. Overview of Main- and Sub-menus

The control panel contains the below main menu screen displays.

Scroll between the menus using the navigation buttons.

Each main menu contains submenus which will be described subsequently.

1. Password (A) (Default password 6802)

2. Programs (B)

Program 1 (BA)

Program 1, Continuous operation (BAA)

Program 2 (BB)

Program 2, spray time (BBA)

Program 2, pause time (BBB)

Program 3 (BC)

Program 3, spray time (BCA)

Program 3, pause time (BCB)

3. Timer (C)

Timer (CA)

Start time (CB)

Stop time (CC)

Start days (CD)

Timer Program (CE)

Day/night Enable (CF)

Day start time (CG)

Day stop time (CH)

Day Program (CI)

Night Program (CJ)

4. Release Signal (D)

Release signal on (DA)

5. Delayed start (E)

Program 1 (EA)

Program 2 (EB)

Program 3 (EC)

6. Settings (F)

Time (FA)

Date (FB)

Language (FC)

Reset (FD)

Reset counters (FDA)

Reset err. log (FDB)

Factory settings

Password (FE)

Password on (FEA)

Password (FEB)

Display Settings (FF)

Backlight intensity (FFA)

Display contrast (FFB)

LL warning activated (FG)

7. Errors (G)

8. Info (H)

Running Hours (HA)

Valve on time (HB)

No of Cycles (HC)

Software version (HD)

9. Communication (I)

Firmware upgrade display by cable (IC)

Firmware upgrade display by infrared (ID)


Firmware upgrade controller PCB (IE)

4.1 Content of the Main menu


The control panel contains the below main menu screen displays.

Scroll between the menus using the navigation buttons.







Each main menu contains submenus which will be described subsequently.

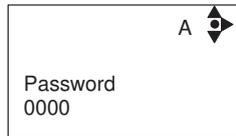


(optional)

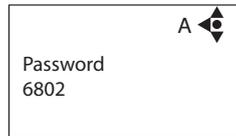

(optional)

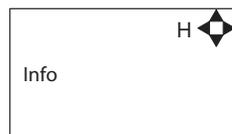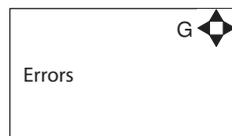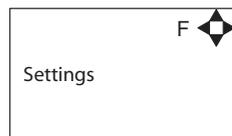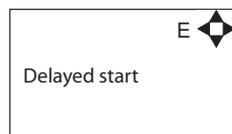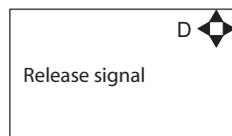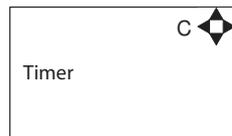

4.2 Content of the Programs menu

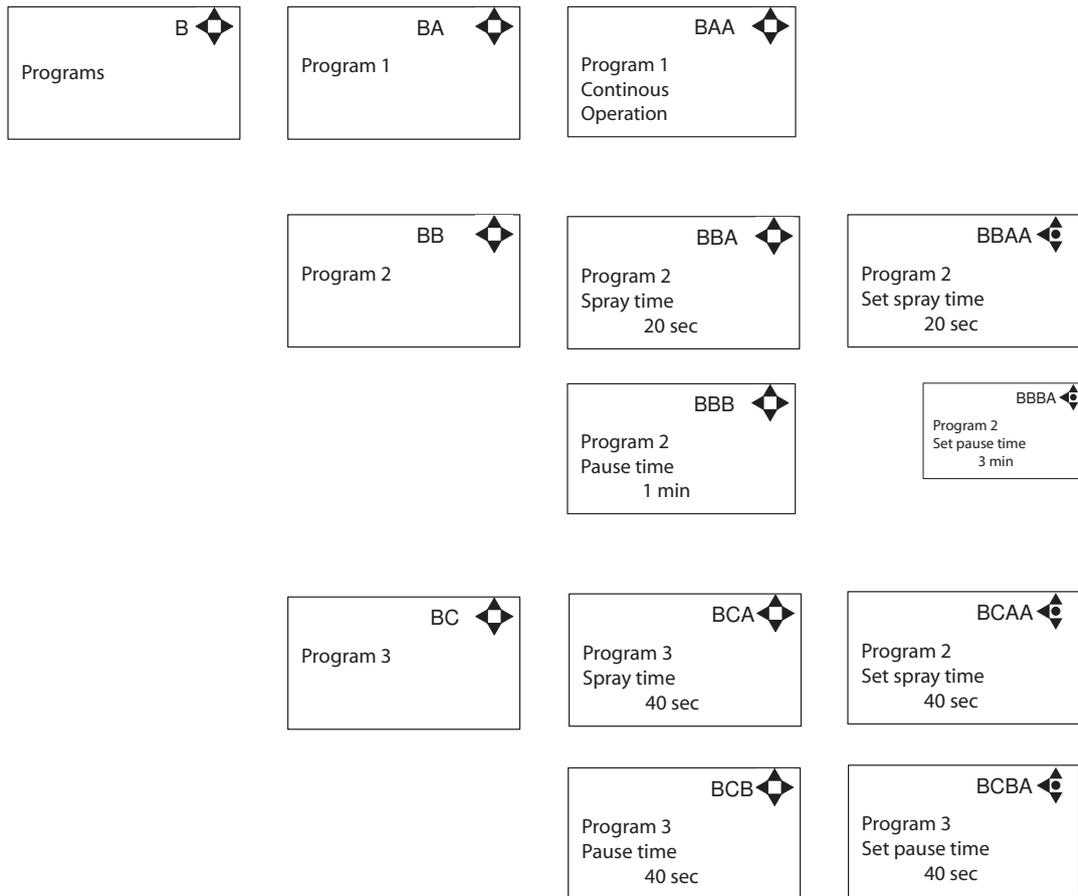

4.3 Content of the Timer menu

Timer C	Timer Off CA	Enable Timer Off CAA	
	Start time 08:00 CB	Timer start Set time: 08:00 CBB	Timer start Set time: 08:00 CBB
	Stop time 16:00 CC	Timer stop Set time: 16:00 CCC	Timer stop Set time: 16:00 CCC
	Start days 0000000 CD	Every day CDA	
		Monday Not active CDB	
		Tuesday Not active CDC	
		Wednesday Not active CDD	
		Thursday Not active CDE	
		Friday Not active CDF	
		Saturday Not active CDG	
		Sunday Not active CDH	

CE  Timer program Not preset	CEA  Set timer prg. Not preset	
CF  Day/night disable	CFA  Day/night disable	
CG  Day start Time: 08:00	CGA  Day start Set time: 08:00	CGA  Day start Set time: 08:00
CH  Day stop time: 16:00	CHA  Day stop Set time: 16:00	CHA  Day stop Set time: 16:00
CI  Day Program Program 1	CIA  Set day prg. Program 1	
CJ  Night Program Program 2	CJA  Set NightPrg. Program 1	

4.4 Content of the Release menu

D  Release signal	DA  Release Signal Off	DAA  Enable Release Signal Off
---	---	--

If enabled a signal of 5-10Vdc must be applied to terminal block "in", to release the unit (see electrical drawing in "Directions for Use").


4.5 Content of the Delayed start menu

E  Delayed start	EA  Program 1 Off	EAA  Delayed start Off
	EB  Program 2 Off	EBA  Delayed start Off
	EC  Program 3 10 sec	ECA  Delayed start 10 sec

4.6 Content of the Settings menu

Settings 	FA 	FAA 	FAA 
	Time	Set time: 08:00	Set time: 08:00
	FB 	FBA 	FBA 
	Date	Set date: 01/15-2012 MM/DD-20YY	Set date: 01/15-2012 MM/DD-20YY
	FC 	FCA 	
	Language	Language English	
	FD 	FDA 	FDAA 
	Reset	Reset counters	Reset counters confirm
		FDB 	FDBA 
		Reset err. log	Reset err. log confirm
		FDC 	FDCA 
		Factory settings	Factory settings confirm
	FE 	FEA 	FEAA 
	Password	Password On	Enable Password off
		FEB 	FEBA 
		Password 6802	Set Password 6802
	FF 	FFA 	FFAA 
	Display Settings	Backlight Intensity	Backlight 75
		FFB 	FFBA 
		Display Contrast	Contrast 8
	FG 	FGA 	
	LL Warning act. Enable	LL Warning label act. Enable	

4.7 Content of the Errors menu

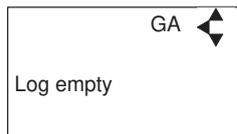

4.7.1 Example of Error log screen display

All error occurrences will be stamped with date and time.
E indicates Error number.



The error log stores up to 30 occurrences. When max. memory is reached, the errors will be deleted according to "First in" First out" principle.

4.7.2 Error List

Error	Cause	Remedy
C1 Empty can	1. No liquid in can	1. Press "OFF" fill liquid in can or replace can.
C2 Low level can	1. Can almost empty	1. Press "OFF" fill liquid in can or replace can.

If an error occurs, the relay of terminal block "OUT1" will be activated (see electrical drawing in "Directions for Use").

4.8 Content of the Info menu

H 	HA 
Info	Running hours 00
	HB 
	Valve On time 3:22 Hours:Min
	HC 
	No of Cycles 000
	HD 
	Software Display: V1.01 Control: V1.01

4.9 Content of the Communication menu

I 	IC 	ICA 
Communication	Firmware upgrade Display by cable	Confirm, Display Firmware upgrade by cable
	ID 	IDA 
	Firmware upgrade Display by infrared	Confirm, Display Firmware upgrade by infrared
	IE 	IEA 
	Firmware Upgrade Controller PCB	Confirm Firmware Upgrade Controller PCB


5. Upgrade Firmware

5.1 Upgrade using USB Cable


1. Connect USB cable (Item No. 110001526) to PC USB port (Remove other USB cables connected to PC)
2. Connect Display cable to USB cable
3. In the menu go to, Communication-> Firmware upgrade Display by cable->Confirm, Display Firmware upgrade By cable and press "OK"
4. Display should now be looking like this:

Upgrade Ready
Power Cycle and
Start PC app.


5. Disconnect display from usb cable and connect it again (Power cycle)
6. Make sure the Green "ON" led and the red "OFF" led at the display is both on, display is blank
7. Startup PC program FWU200.exe (can be downloaded from Nilfisk Food website)
8. Window should be looking like this

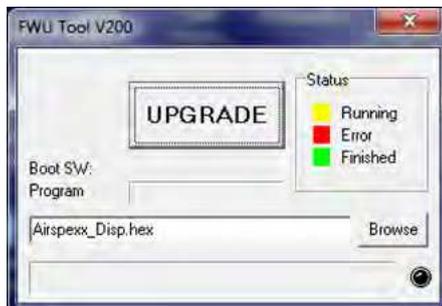

9. Press "Browse" button

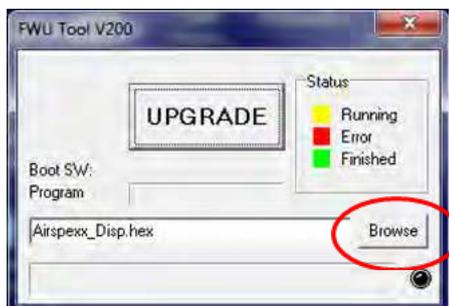

10. Select the file you will use for upgrade. Software File can be downloaded from Nilfisk Food website. The name of the file should end with ".hex".
Ex V202_Doorway_Airspexx_Dispatch.hex
11. When the file is located press "Open" in browser window
12. The file name will now be written in file text line

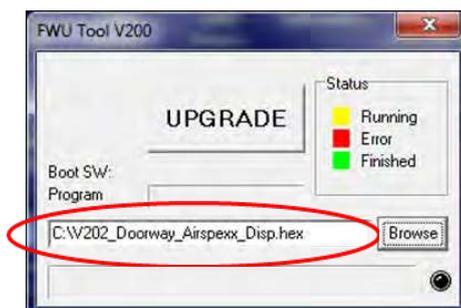

13. Press UPGRADE button in FWU 200 tool



14. After a short while the FWU tool should start upgrading, the upgrade button should turn Yellow and change to "RUNNING"



15. The progress bar "Program" must go to the end before the upgrade is complete (less than 1 minute)
16. When the upgrade is complete the FWU tool should be looking like this, Button turns Green and text changes to "DONE/NEW"



17. Now the display is upgraded
18. To verify software version in display, in the menu go to, Info->Software
19. Here you will find display software version and control software version (if display is not connected to a control board, control software will be V0.00)

5.2 Upgrade using IrDA Cable


1. Connect power to equipment (Doorway or Airspexx)
2. In the menu go to, Communication-> Firmware upgrade Display by Infrared->Confirm, Display Firmware upgrade By cable and press "OK"
3. Display should now be looking like this:

Upgrade Ready
Power Cycle and
Start PC app.


4. Turn Off equipment and turn it on again (Power cycle)
5. Make sure the All three led's are on (Green "ON", red "ERROR" and red "OFF") and the display is blank
6. Connect Irda module (Item No. 110001558) to PC USB port
7. Place Irda module on display module like this



8. Startup PC program FWU200.exe (can be downloaded from Nilfisk Food website)
9. Window should be looking like this

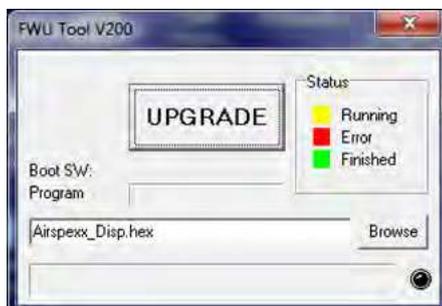


10. Press "Browse" button

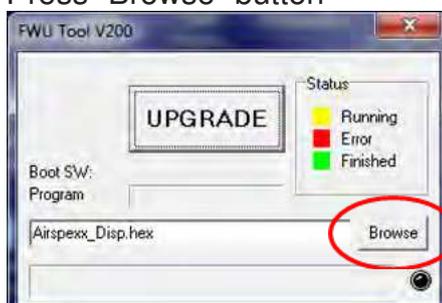

11. Select the file you will use for upgrade. This file needs to be downloaded from the internet or copied from a mail etc. The name of the file should end with .hex.
Ex V202_Doorway_Airspexx_Dispatch.hex
12. When the file is located press "Open" in browser window

13. The file name will now be written in file text line

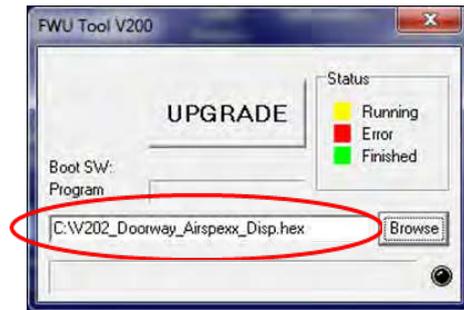

14. Press UPGRADE button in FWU 200 tool



15. After a short while the FWU tool should start upgrading, the upgrade button should turn Yellow and change to "RUNNING"



16. The progress bar "Program" must go to the end before the upgrade is complete (less than 1 minute)
17. When the upgrade is complete the FWU tool should be looking like this, Button turns Green and text changes to "DONE/NEW"



18. Now the display is upgraded
19. To verify software version in display, in the menu go to, Info->Software
20. Here you will find display software version and control software version (if display is not connected to a control board, control software will be V0.00)

5.3 Upgrade Controller Board

1. Make sure display is connected to controller
2. Power up equipment
3. Go to menu Communication-> Firmware upgrade Controller PCB->Confirm, Firmware upgrade Controller PCB and press "OK"
4. Display restarts
5. After restart the display will start erasing the control board, display will start counting from 0% to 100%

Control upgr.
Erasing 0%

6. When Erasing reaches 100%, the display will automatically start to program control board

Control upgr.
Erasing 0%
Programming 0%

7. Programming will now start to count from 0% to 100%
8. When programming reaches 100%, the programming is complete
9. The display will be looking like this

Control upgr.
Erasing 100%
Programming 100%
Power off unit

10. Turn Off equipment and turn it on again (Power cycle)
11. Now the control PCB is upgraded
12. To verify software version in display, in the menu go to, Info->Software
13. Here you will find display software version and control software version

No.: 110002829C / November 2014

© 2006 All rights reserved
ECOLAB Engineering GmbH
F&B Engineering Competence Centre EMEA
Raiffeisenstrasse 7
D-83313 Siegsdorf, Germany
Telephone: (+49) 8662/610
Fax: (+45) 8662/61235
Email: engineering-mailbox@ecolab.com

ECOLAB[®]