Hybrid 7 Foamatic Service Check List

Note: Always wear appropriate personal protective equipment (PPE) when troubleshooting/ servicing unit. READ ALL INSTRUCTIONS FROM USER MANUAL BEFORE OPERATING EQUIPMENT					
Item	**Nilfisk P/n**	**Description**	**Action**	**3 Months**	**12 Months**
1	110000963	Flow switch	Check operation/ adjust to 2 green led.	Inspect	Inspect/ Adjust
2	110009805	Solenoid valve Viton	Check operation	Inspect	Inspect
2	110006599	Solenoid valve EPDM	Check operation	Inspect	Inspect
3	110008563	Manual outlet solenoid	Check operation	Inspect	Inspect/ replace
4	110009300	Air regulator complete	Check operation	Inspect	Inspect/ replace
5		Automatic block complete. See page 2 for breakdown	Check operation/ inspect condition	Inspect	Inspect/ replace
6	110008806	Multiblock v2 complete See page 3 for breakdown	Check operation	Inspect	Inspect/ replace
7	641100	O-ring kit outlet	Check for leaks	Inspect	Inspect/ replace
Safety checks					
	Check condition of all hoses for leaks or damage.			X	X
	Ensure cover is in place, this will reduce any chance of chemical spraying directly from the unit if failure occurs.			X	X

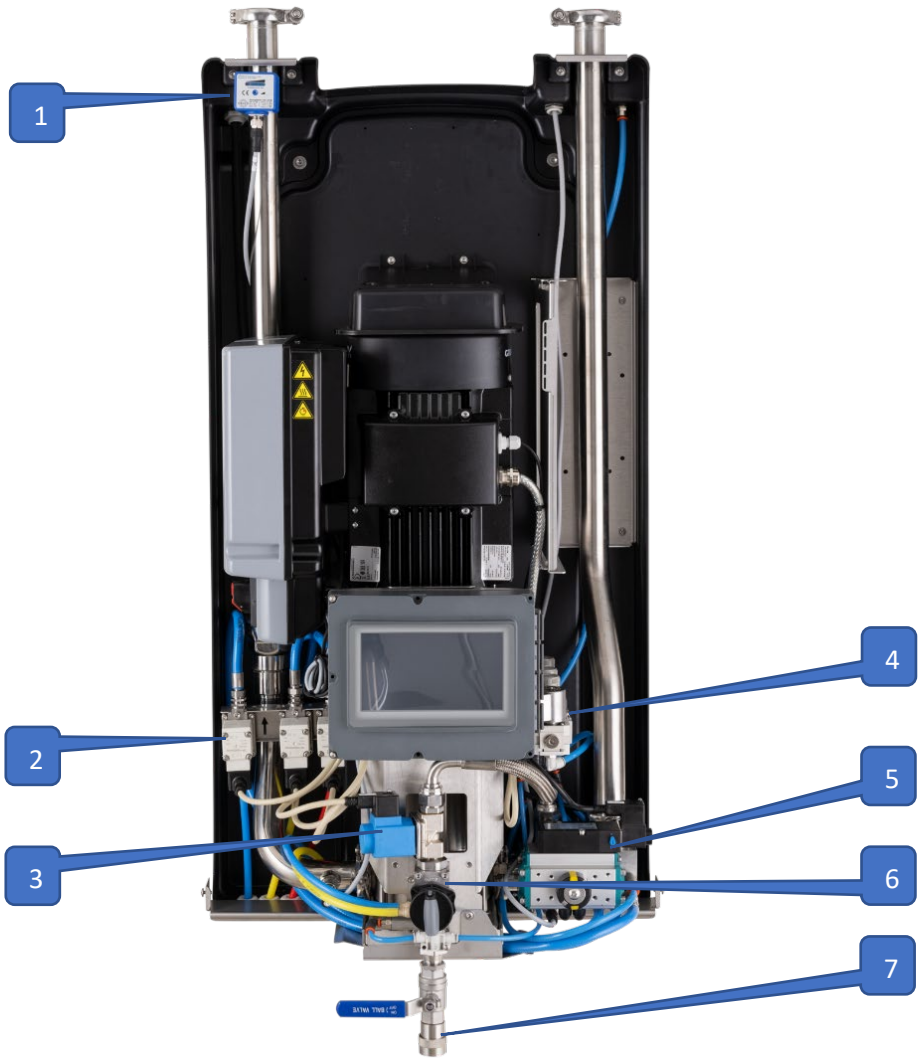

Hybrid 7 Foamatic Service Check List

Automatic block

Note: Always wear appropriate personal protective equipment (PPE) when troubleshooting/ servicing unit. READ ALL INSTRUCTIONS FROM USER MANUAL BEFORE OPERATING EQUIPMENT					
Item	**Nilfisk P/n**	**Description**	**Action**	**3 Months**	**12 Months**
1	110001214 110001197 110001198	Blue Chemical hose Yellow Chemical hose Red Chemical hose	Check condition of chemical hoses.	Inspect	Inspect/ replace
2	110005276	Service kit actuator ball valve	Check sealing points for leaks (visual)	Inspect	Inspect/ replace
3	110004622	Solenoid air valve	Check operation/ air leaks	Inspect	Inspect/ replace
4	0605792	Actuator	Check for smooth operation	Inspect	Inspect/ replace
5	110005277	Service kit actuator automatic block	Check sealing points for leaks (visual)	Inspect	Inspect/ replace
6	110005362 110005278 110005363	Injector kit 150 Injector kit 300 Injector kit 450	Remove clean and inspect O-rings	Inspect	Inspect/ replace
7	110001979	Air non-return valve	Inspect O-rings	Inspect	Inspect/ replace
8	110008706	Chemical non-return	Inspect O-rings	Inspect	Inspect/ replace
	110005355	**O-ring kit (Excludes 2&5)**		**Inspect**	**Inspect/ replace**
Safety checks					
	Check condition of all hoses for leaks or damage.			X	X

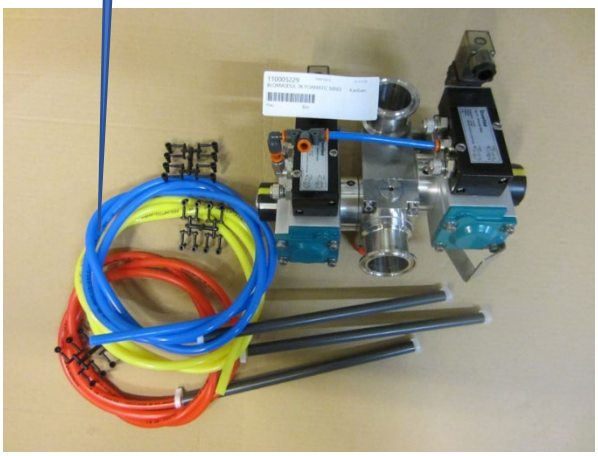

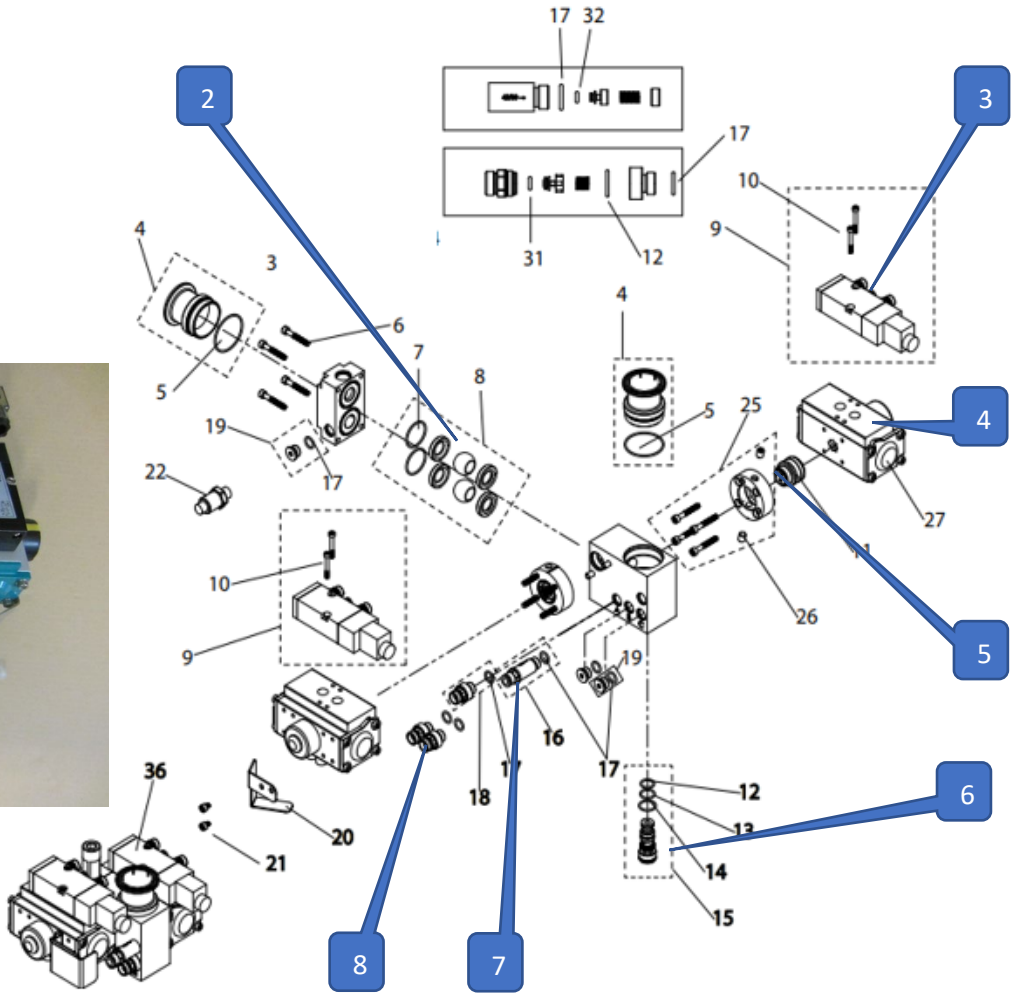

JS2024V1

Hybrid Foamatic Service Check List

Manual block
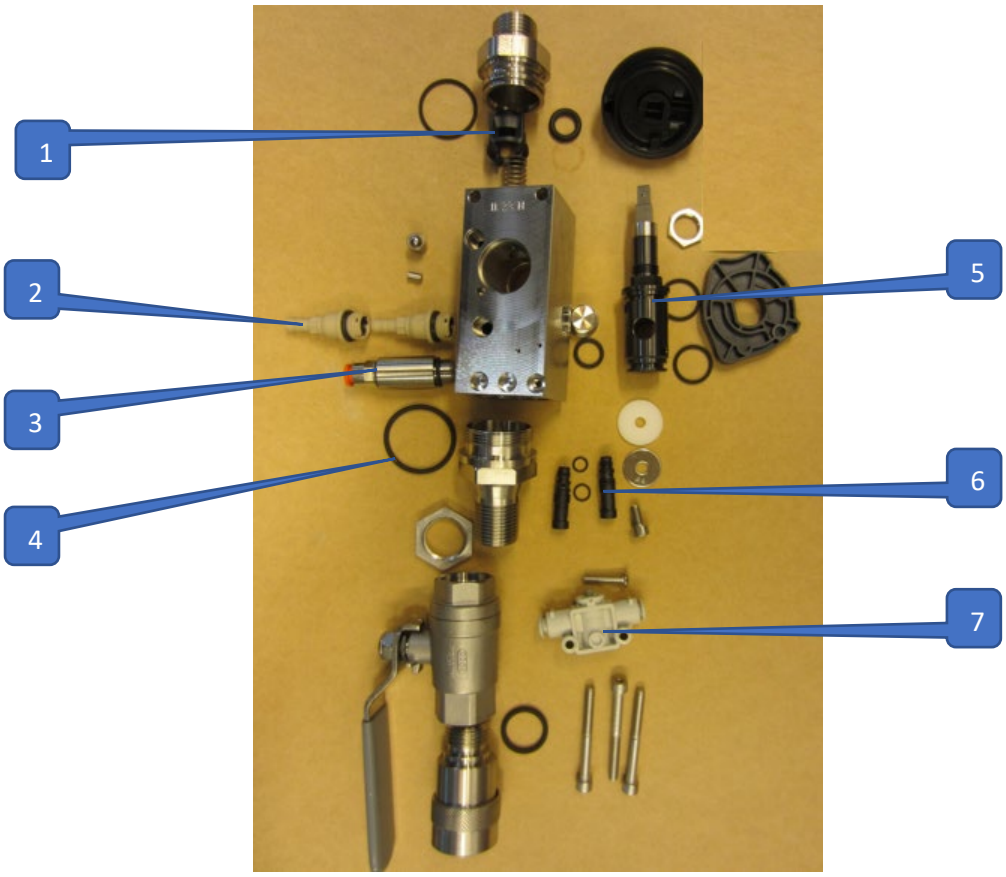
Note: Always wear appropriate personal protective equipment (PPE) when troubleshooting/ servicing unit. READ ALL INSTRUCTIONS FROM USER MANUAL BEFORE OPERATING EQUIPMENT					
Item	**Nilfisk P/n**	**Description**	**Action**	**3 Months**	**12 Months**
1	110008772	Water non-return valve	Check condition.	Inspect	Inspect/ replace
2	110004434	Chemical non return valves	Visually inspect for leaks	Inspect	Replace
3	110007136	Air non-return valve	Check operation	Inspect	Inspect/ replace
4	110005355	O-ring kit (all O-rings in block)	Check condition of all O-rings	Inspect	Inspect/ replace
5	110007107	Axle/ shaft complete	Check operation/ inspect condition	Inspect	Inspect
6	110007098	Injector kit	Inspect for wear or blockages	Inspect	Inspect/ replace
7	110008923	Air valve complete	Check for leaks	Inspect	Inspect/ replace
Safety checks					
	Check condition of all hoses for leaks or damage.			X	X
	Ensure cover is in place, this will reduce any chance of chemical spraying directly from the unit if failure occurs.			X	X