

Software Manual

Control Panel for Hybrid Units

Models:

MU421-P

MU422-P

BW4-P

BW7-P

BF4-P

BF8-P




1. Description

This software manual describes the operation of the control panel of the advanced Single Booster unit (SB and SBHL).

The advanced SB unit is operated via the control panel (see below illustration).


1. OFF
Button (1) switches OFF the unit.
2. ON/STANDBY
Button (2) switches ON the unit.
3. ERROR
Error light indicator (3).
4. NAVIGATION BUTTONS
The four "arrow" navigation buttons (4) are used for navigation in the display menu. Pressing the "OK" button activates the menu and confirms any activity displayed.
5. DISPLAY

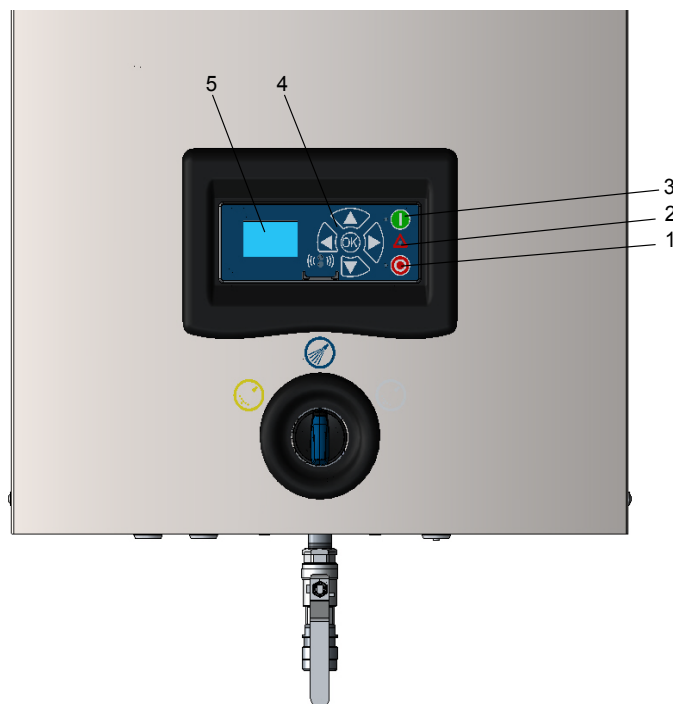


1. Description	3
2. DISPLAY LAYOUT	4
3. MODES	5
3.1 Power On	5
3.2 Standby	5
3.3 Run Mode	6
3.3.1 Single Booster with high and low pressure	6
3.4 Power Off	7
3.5 Error Mode	7
4. MAIN MENUS	8
5. OVERVIEW OF MAIN- AND SUB-MENUS	9
5.1 Info menu	10
5.2 Errors menu – CAUSE & REMEDY	11
5.2.1 Error List	11
5.3 Set up menu	13
5.3.1 Settings	
5.3.2 Language & Units	16
5.3.3 Supply tank	16
5.3.4 Communication	17
5.3.5 I/O settings	17
5.3.6 Installation	17
5.3.7 Reset	17
5.4 Readings	18
6. UPGRADE FIRMWARE	19
6.1 Upgrade display using USB Cable	19
6.2 Upgrade display using IrDA Cable	21
6.3 Upgrade Inverter	23

2. Display layout

Example: (1)
↓

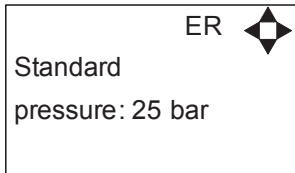

(2)
↓

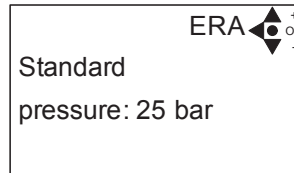

(1)

When switched on the display will show an arrow symbol in the top right corner equivalent to the active navigation buttons on the control board.

The arrows illustrate that it is possible to scroll up and down between the menus. Scrolling to the right makes it possible to enter a value. Set the value scrolling up (+) or down (-) to set the value higher or lower accordingly. Confirm by pressing ok.


(2)

A letter combination for easy reference in connection with service work will appear in the top right corner of the display.


3. Modes

3.1 Power On

The very first time the unit is switched on, we recommend setting date and time in the Setup menu, settings, display EP. If date and time is not set, date and time will count from the pre-set default date and time.

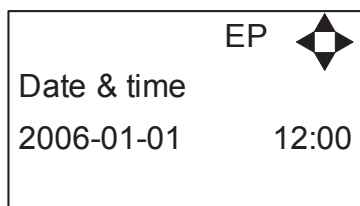


Set date and time using navigation buttons.

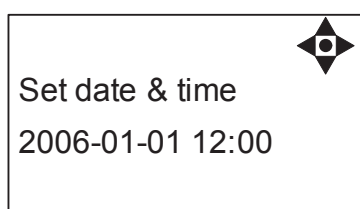

Confirm by pressing OK button.

3.2 Standby

The start up display will look as the one below.

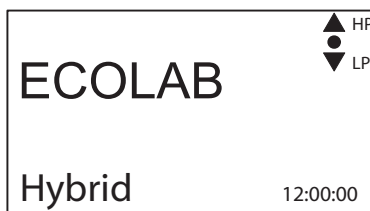

Display for SB model with High- and Low pressure - Select either HP or LP using arrows up & down.

3.3 Run Mode

3.3.1 Single Booster with high and low pressure

The following screen displays will appear when the unit is in Run Mode.

HIGH (25 bar)
P=0 BAR
T=0 °C

▲
▼ SP

Screen display for High pressure unit in Run Mode.
Scroll down to return to STANDARD pressure.

STANDARD (25 bar)
P=0 BAR
T=0 °C

▲ HP
▼ SP

Screen display STANDARD pressure.
Scroll up to choose HP and scroll down to choose LP.

LOW (12 bar)
P=0 BAR
T=0 °C

▲ SP

Screen display for Low Pressure unit in Run Mode.
Scroll up to return to STANDARD pressure.

Please note that you will remain in HIGH or LOW pressure Run Mode until otherwise is selected.

3.4 Power Off



When the unit is off the display will only show a small dot in the top right corner.

In Off mode it is possible to access all menus without the pump running by pressing the OK button on the panel.

Dot is equivalent to the OK confirm button on the panel.

3.5 Error/Warning



In case of an error, “ERROR” will appear on the display screen.

Press the OFF button to switch of unit.

If the error remains when the unit is switched ON again, please Press right arrow to see current error.

In case of a warning, “WARNING” will appear on the display screen. When a warning is detected the machine will either stop or run with limited performance until the cause of the warning has been improved (eg. inlet pressure).





To see further error/warning list and possible cause and remedy go to section 5.2.

4. Main Menu

The control panel contains the below main menu screen displays.

Scroll between the menus using the navigation buttons.

Each main menu contains submenus which will be described subsequently.

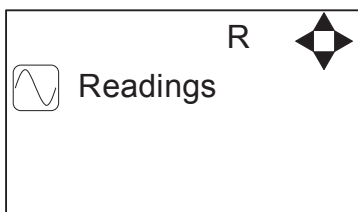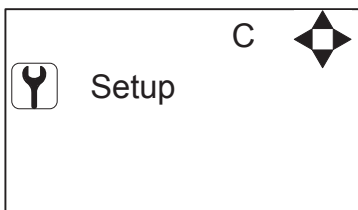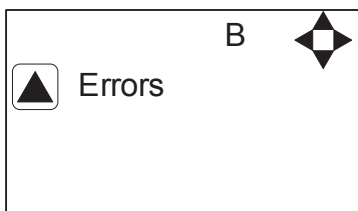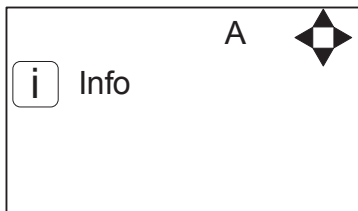

5. Overview of Main- and Sub-menus

<p><u>1. Info (A)</u></p> <ul style="list-style-type: none"> 1 Σ Counters total (AA) 2 Σ Counters trip (AB) 3 Service center(AD) 4 Machine info (AE) <p><u>2. Errors (B)</u></p> <p><u>3. Setup (C) (default password 6802)</u></p> <p><u>1 Password (CA)</u></p> <p><u>2 Settings (E)</u></p> <ul style="list-style-type: none"> Post run time (ED) Dry run level (EE) Standard pressure (ER) High pressure (EA) Low pressure (EB) Startup method (EY) Pressure start level(EX) Startup delay (EW) Quick Start level (EC) Auto off delay (EZ) Acceleration time (EU) Date & Time (EP) Service text (EJ) Inverter power (EO) Backlight intensity (EI) Display contrast (EV) User password (EL) Standard settings (EK) <p><u>3 Languages & units (F)</u></p> <ul style="list-style-type: none"> Language (FA) Units (FB) <p><u>4 Supply Tank (H)</u></p> <ul style="list-style-type: none"> Tank control (HA) LLA Detect Delay (HB) <p><u>5 Communication (I)</u></p> <ul style="list-style-type: none"> Firmware Upgrade by cable (IC) Firmware Upgrade by infrared (ID) <p><u>6. I/O Settings (J)</u></p> <ul style="list-style-type: none"> Output 1 (JA) Output 2 (JB) Input (JC) <p><u>7. Installation (K)</u></p> <ul style="list-style-type: none"> Install password (KA) <p><u>8 Resets (D)</u></p> <ul style="list-style-type: none"> Reset trip counters(DA) 	<p><u>4. Readings (R)</u></p> <ul style="list-style-type: none"> Pump state (RA) Outlet pres. (RB) Water temp (RC) Supply pressure (RD) Flow Status (RF)
---	--

5.1 Info Menu

Please note that the Info menu is only for display – all data must be typed in via the setup menu!

i

Info

A

ΣCounters

total

AA

ΣTOTAL

ΣPower 0kWh

ΣHours 0h

AAA

Displays accumulated consumption of power and operation hours.

ΣCounters

trip

AB

ΣTRIP

ΣPower 0kWh

ΣHours 0h

ABA

Displays accumulated consumption of power and operation hours. To reset the trip counter go to the setup menu.

Service center

AD

SERVICE

Enter TEXT HERE

ADA

Displays name and tel. no. of service technician.

Machine info

AE

INFO

SW ID:5.02 5-14

HW ID:HYBRID

CT ID:1.01

AEA


This display view is only ment as an example, SW ID and CT ID shows the current SW version.

Displays Software version and Pump size, machine configuration and inverter software version.

5.2 Errors Menu – CAUSE & REMEDY

Example of Error log screen display:

All error occurrences will be stamped with date and time.
E indicates Error number. P indicates Pump number.

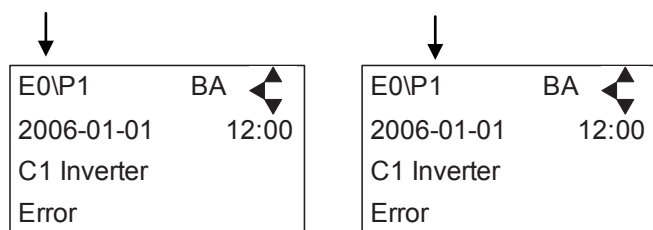

The error log stores up to 1000 occurrences. When max. memory is reached, the errors will be deleted according to "First in" First out" principle.




5.2.1 Error List

Error	Cause	Remedy
C1 Inverter Error	1. Frequency inverter in error state	1. Switch off the power on the service switch. Wait 180 sec. Switch on the unit again. If error still occurs, please contact your local service technician.
C2 Low Supply Pressure	1. Insufficient water supply	1. Secure sufficient water supply pressure. 2. Check inlet filter for impurities/rinse filter 3. Contact your local service technician.
C3 High Water Temp.	1. Water pump top temperature is above 80° 2. Water consumption is too low (pump column has been overheated)	1. Lower the inlet water temp. (max 70°C) 2. Secure sufficient water consumption 3. Contact your local service technician.
C4 High Motor Temp.	1. Insufficient cooling of motor 2. The ambient temperature is above 40°	1. Secure that all air channels are open and not blocked by impurities 2. Lower ambient temperature
C5 High Supply Temp.	1. Water inlet temperature is above 70°	1. Lower the water temp. (max 70°C) 2. Contact your local service technician.
C6 Low Sensor Supply Voltage	1. Voltage supply for sensors too low	1. Press "off" button 2. If error reoccurs, contact your local service technician.
C7 No Response Error	1. No communication between display and control board	1. Contact your local service technician.
C8 Low Tank Level	1. Insufficient water supply 2. Water supply valve not open	1. Check correct water supply 2. Secure sufficient air supply to valve 3. Contact your local service technician.
C9 High Tank Level	1. Water supply valve not closed	1. Secure sufficient air supply to the valve. 2. Contact your local service technician.
C11 Warning Cri. Inlet press.	1. Insufficient water supply 2. Booster will return to standby mode after 20 sec. If this error occurs 3 times within 20 min. Error C2 occurs.	1. Secure sufficient water supply or reduce consumption 2. Check inlet filter for impurities/rinse filter 3. Contact your local service technician.
C13 Warning Low inlet press.	1. Insufficient water supply. The machine will keep on working as always, but the maximum speed of the pump will be reduced until sufficient inlet pressure is present.	1. Secure sufficient water supply or reduce consumption 2. Check inlet filter for impurities/Rinse filter







C14 Warning leakage start	1. Booster start condition changed to flow, due to leakage in pipe	1. Check for leakage in pipe system. 2. Press "off" button 3. Contact your local service technician.
C20 Low Sensor Signal P-Pump-top	1. Pressure signal from pumptop sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C21 Low Sensor Signal T-Pump-top	1. Temperature signal from pumptop, sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C22 Low Sensor Signal P-Inlet	1. Pressure signal from inlet sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C23 Low Sensor Signal T-Inlet	1. Temperature signal from inlet sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C24 Low Sensor Signal block	1. Signal from block sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C25 Low Sensor Signal flow	1. Signal from flow sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C30 High Sensor Signal P-Pump-top	1. Pressure signal from pumptop sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C31 High Sensor Signal T-Pump-top	1. Temperature signal from pumptop sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C32 High Sensor Signal P-Inlet	1. Pressure signal from inlet sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C33 High Sensor Signal T-Inlet	1. Temperature signal from inlet sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C34 High Sensor Signal block	1. Signal from block sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C35 High Sensor Signal flow	1. Signal from flow sensor, out of range	1. Press "off" button 2. Contact your local service technician.
C40 Sensor Load Pumtop Sensor	1. Supply voltage for pumptop sensor too low. 2. Pumtop sensor using too much current	1. Press "off" button 2. Contact your local service technician.
C41 Sensor Load Inlet sensor	1. Supply voltage for inlet sensor too low 2. Inlet sensor using too much current	1. Press "off" button 2. Contact your local service technician.
C42 Sensor Load Block sensor	1. Supply voltage for block sensor too low 2. Block sensor using too much current	1. Press "off" button 2. Contact your local service technician.
C43 Sensor Load Flow sensor	1. Supply voltage for flow sensor too low 2. Flow sensor using too much current	1. Press "off" button 2. Contact your local service technician.
C44 Chemistry can low	1. Chemistry can almost empty	1. Replace or refill selected chemistry to can
C45 Inverter Module temp.	1. Water consumption too high 2. Ambient temperature too high"	1. Lower the load for inverter 2. Lower the ambient temperature"
C46 Inverter Board temp."	1. Water consumption too high 2. Ambient temperature too high 3. Load at Board high"	1. Lower the load for inverter 2. Lower the ambient temperature 3. lower the load at board"

5.3 Setup Settings


The Setup Main menu contains the below submenus, which will be described subsequently.

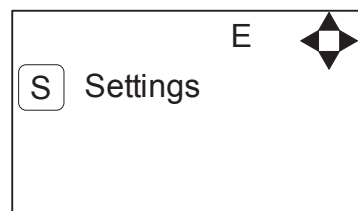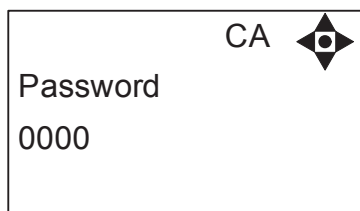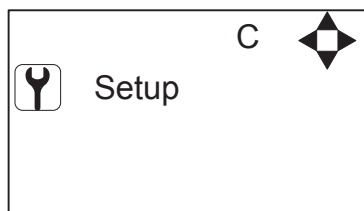


Password Note: Default user password is 6802. Enter the settings menu to change the default password. To avoid unintended access to the system the your local service technician. can insert a blocking preventing access to the password controlled menus.

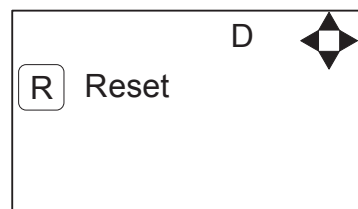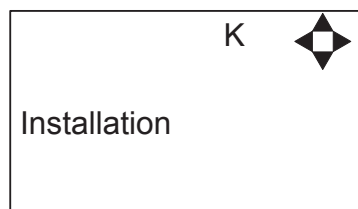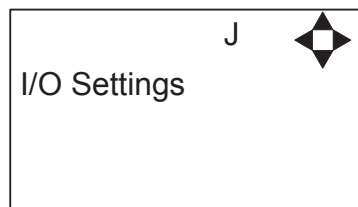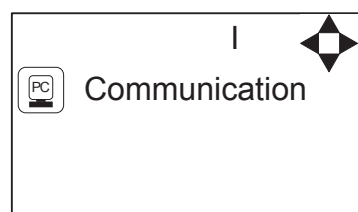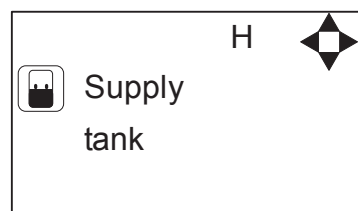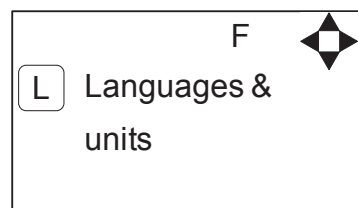


5.3.1 Settings

E 

S Settings


ED 

Post run
Time: 20 sec.


EDA 

Post run
Time: 20 sec.

Set Post run time.


EE 

Dry run
level: 0.5 bar


EEA 

Dry run
level: 0.5 bar

Set dry run level.


ER 

Standard
pressure: 25 bar


ERA 

Standard
pressure: 25 bar

Set standard pressure.


EA 

High
pressure: 25 bar


EAA 

High
pressure: 25 bar

Set high pressure.


EB 

Low
pressure: 12 bar


EBA 

Low
pressure: 12 bar

Set low pressure.

EY 


Startup
Method: Pressure

EYA 


Set Startup
Method: Pressure

EX 


Pressure Start
Level: 8 bar

EXA 


Set Pres. Start
Level: 8 bar

EW 


Startup
Delay: 10 sec

EWA 


Set Startup
Delay: 10 sec.

EC 


Quick start
level: Off

ECA 


Quick start
level: Off

EZ 


Autooff
Delay:OFF

EZA 

Set auto off
Delay: OFF

EU 

Accelleration
Ramp: 3 sec

EUA 

Set Acc.
Ramp: 3 sec


EP 

Date & time
2006-01-01 12:00




Set date & time
2006-01-01 12:00

Set date and time


SERVICE EJ 

Enter TEXT HERE


SERVICE EJA 

Enter TEXT HERE

Enter name and tel. no of Your local service technician.


EO 

Inverter
power: 11000W


EOA 

Inverter
power: 11000W

Set rated power of frequency inverter

EI 

Backlight
intensity: 75 %


EIA 

Backlight
intensity: 75 %


Set the backlight intensity.

EV 


Display
Contrast:8

EVA 

Set display
Contrast: 8


EL 

User
Password: 6802


ELA 

Password
6802

Create new user password (default 6802).

EK 


Standard
settings

EKA 


Reset?

Reset to standard factory settings.


5.3.2 Language & Units

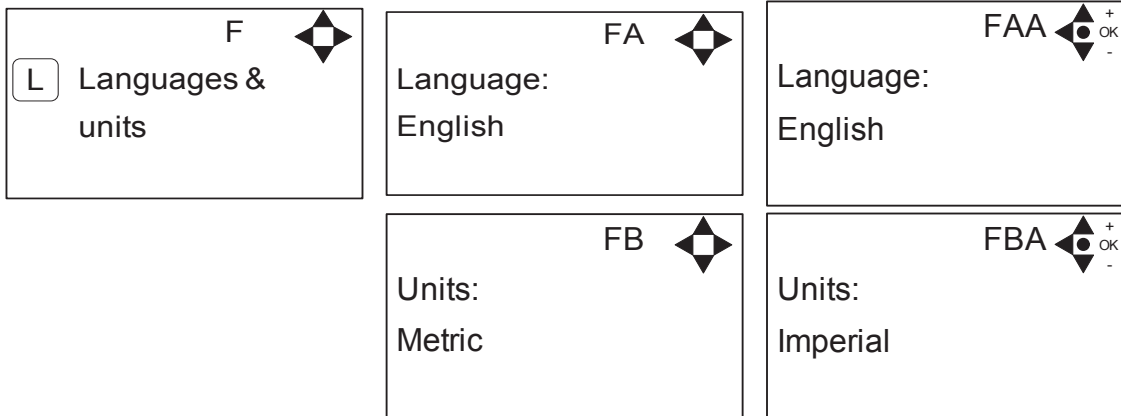

5.3.3 Supply tank

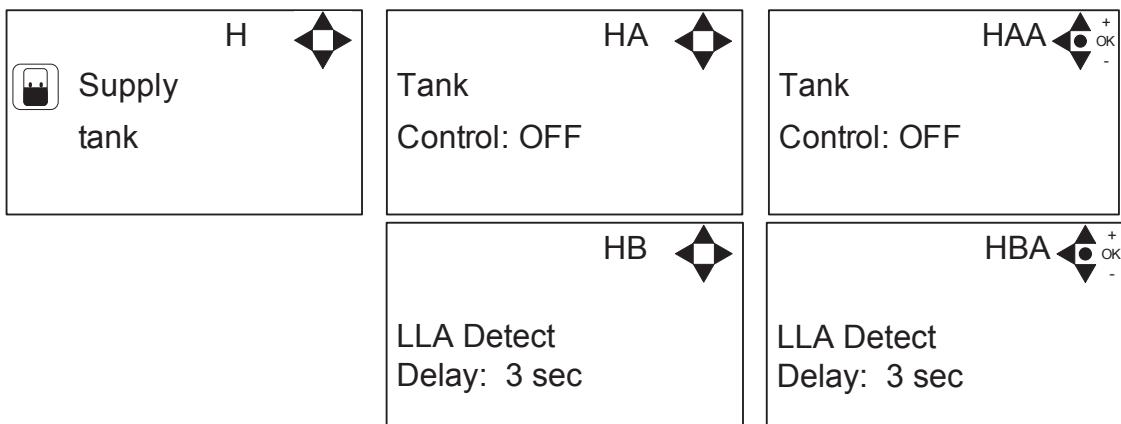


5.3.4 Communication*

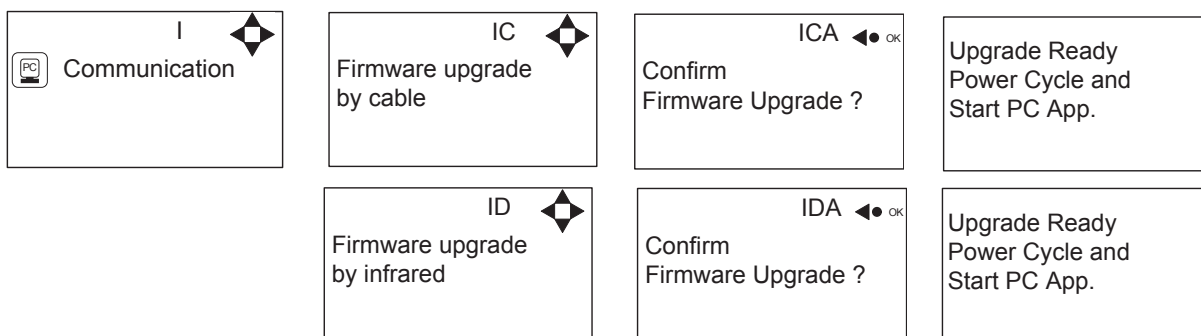

*For the use of authorized Your local service technician only.

5.3.5 I/O Settings

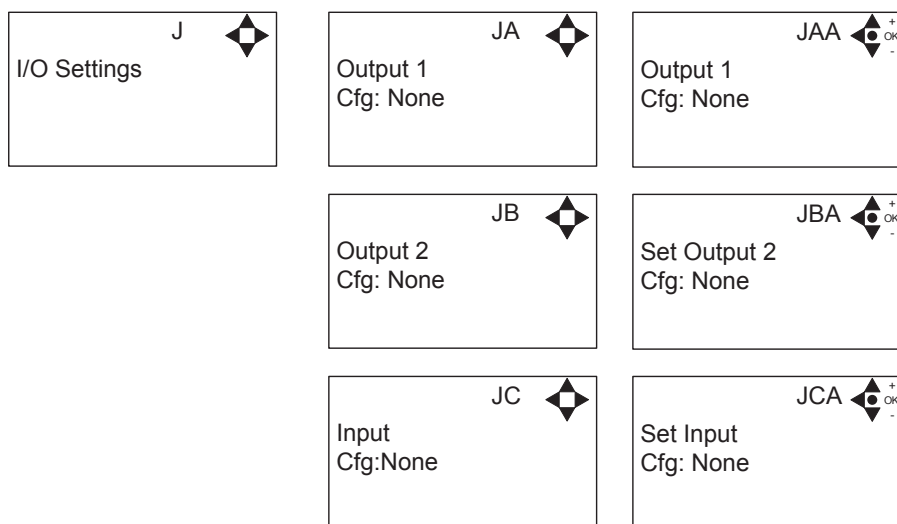

Output 1 options:

- None – No function
- Error – Active if an error are detected
- Run/Stop – Active if booster is running and not active when it is stopped.
- Standby /off - active if booster is running or in standby.


Output 2 options:

- None – No function
- Delay start – Gives a signal at this port, before starting the pump.
The length of the delay is set in the settings menu, startup delay.
This function could for instance be used to secure start up of prepressure pump before starting the unit.

Input


- None – No function
- Release – unit unable to start before this signal is present.
- Setpoint – Output pressure is controlled by external voltage source.
- Chem. Low - Low level in chemistry can

5.3.6 Installation

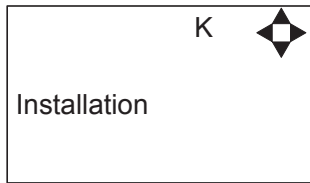


* For the use of authorised Your local service technician only.

5.3.7 Reset

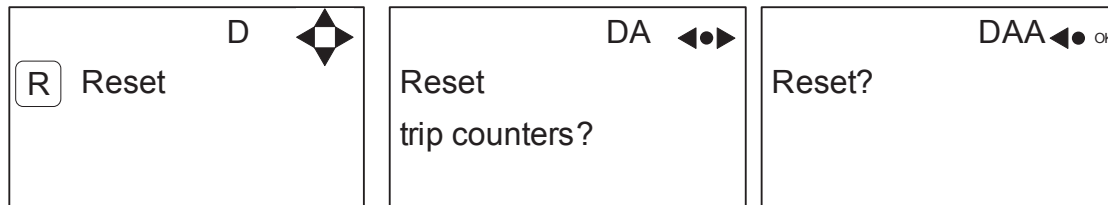

5.4 Readings

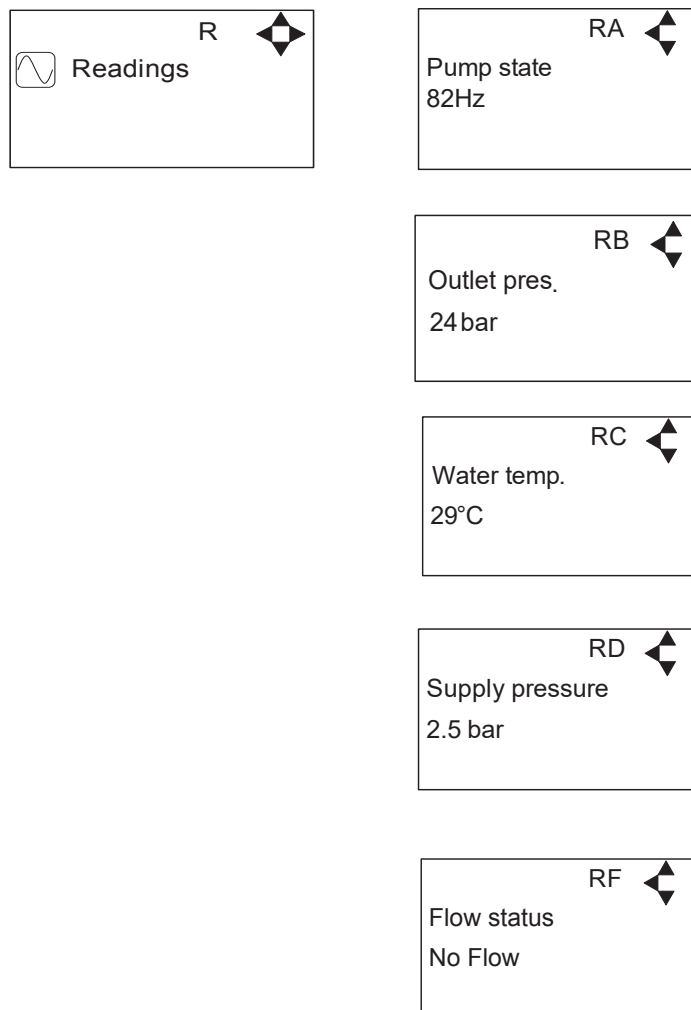

6. Upgrade Firmware


Upgrading from software 5.02 or higher.

6.1 Upgrade display using USB Cable


1. Connect USB cable (Item No. 110007947) to PC USB port (Remove other USB cables connected to PC)
2. Connect Display cable to USB cable
3. In the menu go to, Setup->"password"->Communication-> Firmware upgrade by cable->Confirm Firmware upgrade and press "OK"
4. Display should now be looking like this:

Upgrade Ready
Power Cycle and
Start PC App.


5. Disconnect display from usb cable and connect it again (Power cycle)
6. Make sure the Green "ON" led and the red "OFF" led at the display is both on, display is blank
7. Startup PC program FWU200.exe (can be downloaded from Nilfisk Food website)
8. Window should be looking like this

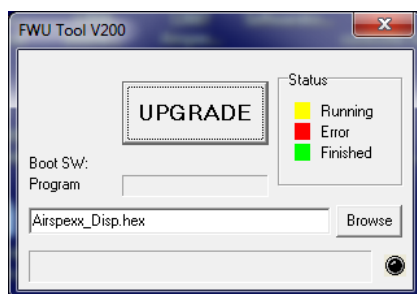


9. Press "Browse" button

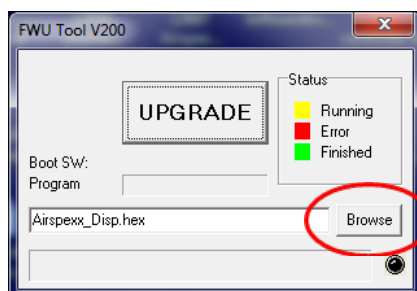


10. Select the file you will use for upgrade. Software File can be downloaded from Nilfisk Food website. The name of the file should end with ".hex". Ex V5.14_SB_DISP.hex
11. When the file is located press "Open" in browser window
12. The file name will now be written in file text line

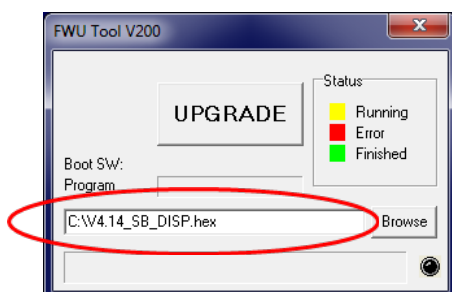


13. Press UPGRADE button in FWU 200 tool

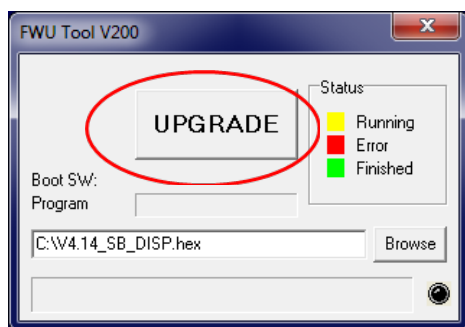

14. After a short while the FWU tool should start upgrading, the upgrade button should turn Yellow and change to "RUNNING"

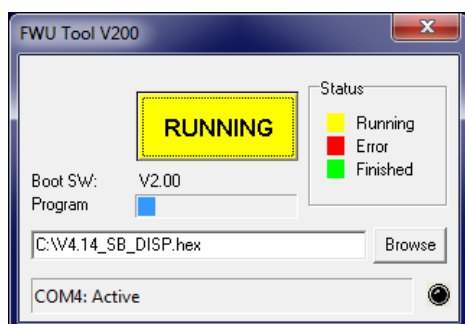

15. The progress bar "Program" must go to the end before the upgrade is complete (less than 1 minute)
16. When the upgrade is complete the FWU tool should be looking like this, Button turns Green and text changes to "DONE/NEW"

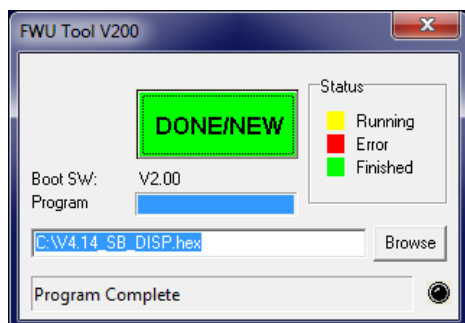

17. Now the display is upgraded
18. To verify software version in display, in the menu go to, Info->Machine info
19. Here you will find display software version and control software version. SW ID "Display software", HW ID "type of device", CT ID Controller board software(if display is not connected to a control board, control software will be 0/300)

6.2 Upgrade display using IrDA Cable


1. Connect power to equipment
2. In the menu go to, Setup->"password"->Communication-> Firmware upgrade by Infrared->Confirm Firmware upgrade and press "OK"
3. Display should now be looking like this:

Upgrade Ready
Power Cycle and
Start PC App.


4. Turn Off equipment and turn it on again (Power cycle)
5. Make sure the All three led's are on (Green "ON", red "ERROR" and red "OFF") and the display is blank
6. Connect Irda module (Item No. 110001558) to PC USB port
7. Place Irda module on display module like this




8. Startup PC program FWU200.exe (can be downloaded from Nilfisk Food website)
9. Window should be looking like this

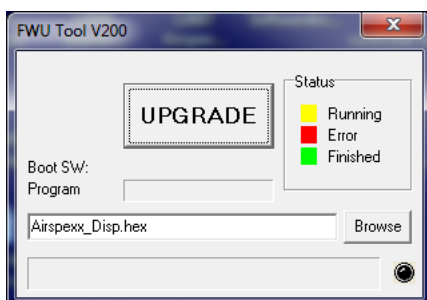


10. Press "Browse" button

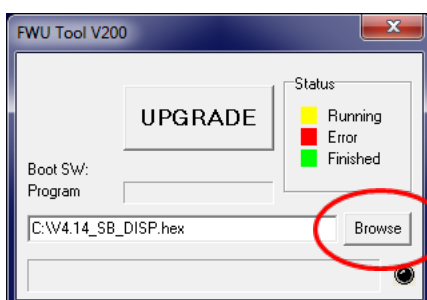


11. Select the file you will use for upgrade. Software File can be downloaded from Nilfisk Food website. The name of the file should end with ".hex". Ex V4.14_SB_DISP.hex
12. When the file is located press "Open" in browser window
13. The file name will now be written in file text line

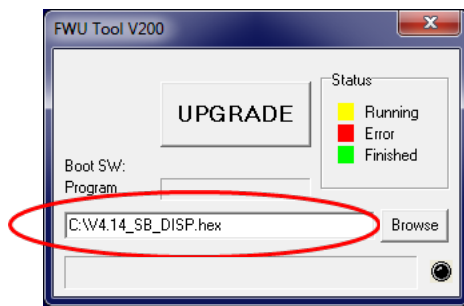


14. Press UPGRADE button in FWU 200 tool

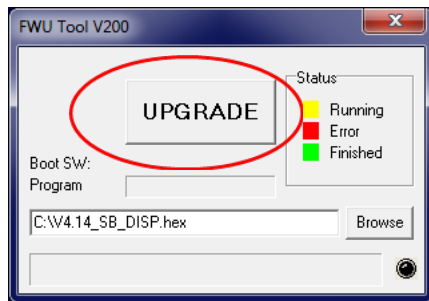

15. After a short while the FWU tool should start upgrading, the upgrade button should turn Yellow and change to "RUNNING"

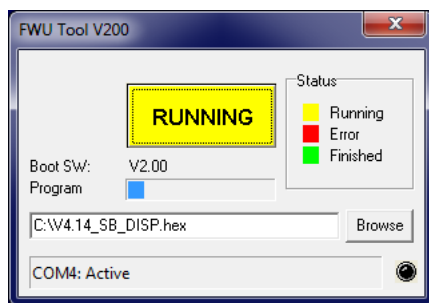


16. The progress bar "Program" must go to the end before the upgrade is complete (less than 1 minute)
17. When the upgrade is complete the FWU tool should be looking like this, Button turns Green and text changes to "DONE/NEW"

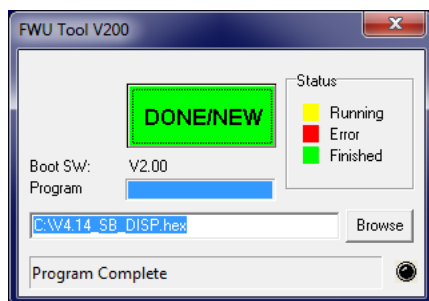


18. Now the display is upgraded
19. To verify software version in display, in the menu go to, Info->Machine info
20. Here you will find display software version and control software version. SW ID "Display software", HW ID "type of device", CT ID Controller board software(if display is not connected to a control board, control software will be 0/300)

6.3 Upgrade Inverter


1. Power off unit using service switch (wait for unit to discharge approximately 5 min.)
2. Open Inverter box
3. Disconnect the Display cable connected to either of the two modbus terminals

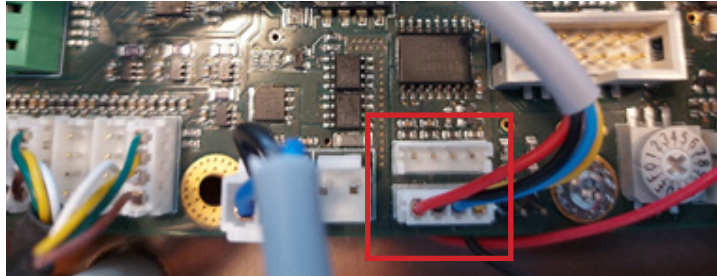

4. Connect the usb cable (110007946) to either one of the modbus connectors
5. Connect usb cable to PC
6. Power on inverter by using service switch (AWARE OF HIGH VOLTAGE IN INVERTER!)
7. Start up Firmware upgrade program (Can be downloaded from Nilfisk FOOD web)

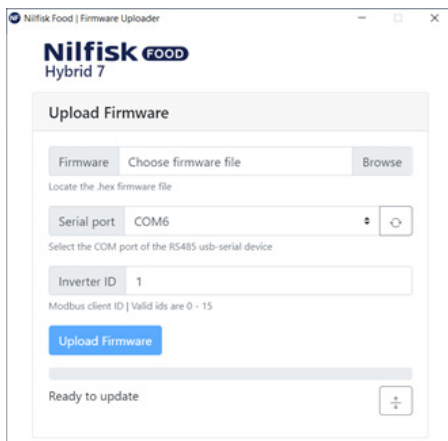

8. Click browse to select upgrade file *.hex (Can be downloaded from Nilfisk FOOD web)
9. Click in Serial port up/down to select the com port for USB cable, if com port is not showing press "refresh" button
10. If necessary change inverter ID to match Inverter ID, Default is 1
11. Press Upload Firmware, and wait for progress bar to reach the end and turn green
12. The progress bar will start moving

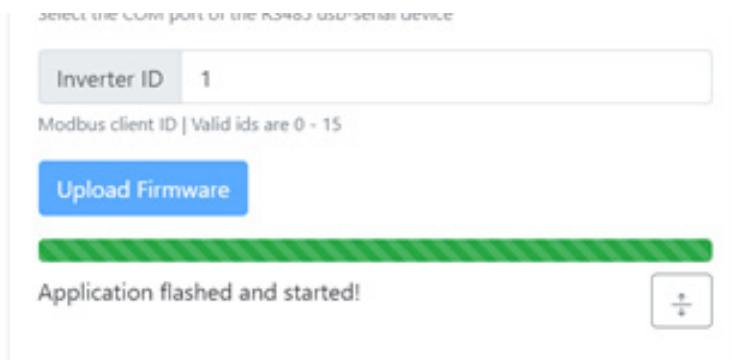

13. Power off unit using service switch (wait for unit to discharge approximately 5 min.)
14. Disconnect the usb cable from inverter
15. Connect the display to modbus connector again
16. Mount the lid of the inverterbox
17. Turn unit back on.



No.: 110007941D

05/2022

Printed in Denmark